

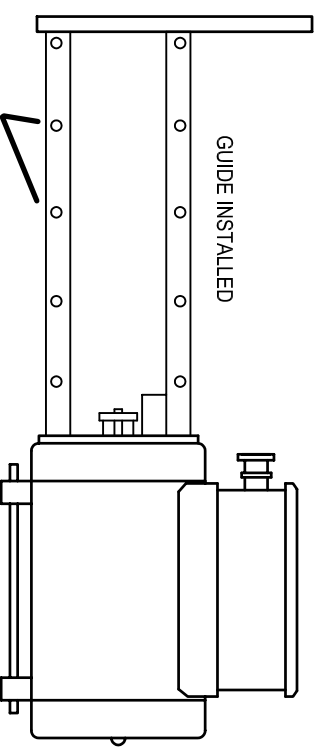
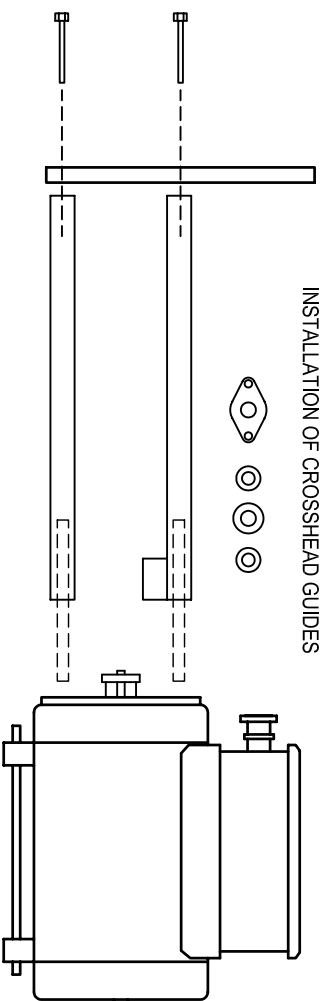


# CROSSHEAD GUIDES

## MASON 2-8-6T

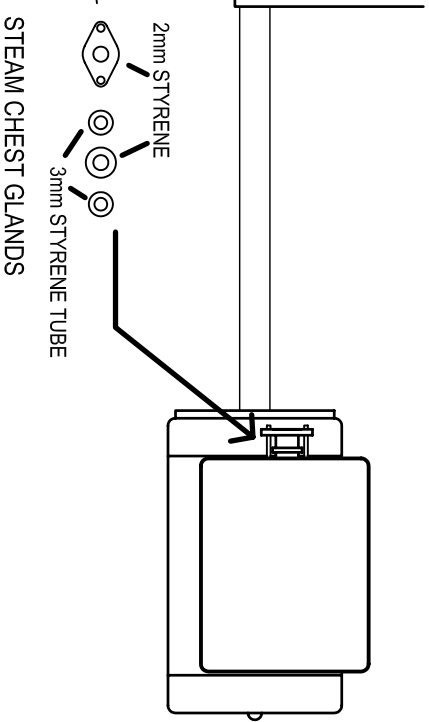

APPLY 0-80 BOLTS THROUGH SUPPORT BRACKET  
INTO REAR END OF CROSSHEAD GUIDE

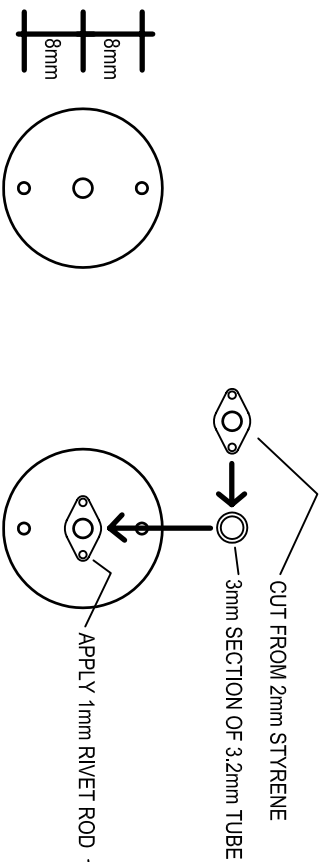

# REAR CYLINDER CAPS

